

#### FEATURES & ADVANTAGES

- ▼ Two sensor networks with a capacity of 16 sensors each (32 total) are provided to communicate with SiloPatrol® SMU ¼ "Smart" RS-485 cable-based level sensors and/or the Flexor® guided wave radar sensors.
- ▼ Calculate and display values for level, volume, weight and percent with data input from the user.
- ▼ Volume and weight calculations now have the ability to include the additional amount of material contained in the roof sections of steep silo roofs below the sensor mounting location.
- ▼ Automatic, Manual or Auto/Manual operating modes provide versatility for SiloPatrol® SMU \[ \mathbb{L} \].
- ▼ Displays real-time measurement updates provided by Flexer® sensors.
- ▼ Set-up parameters for Flexar® can be modified by using the HMI² keypad.
- Built-in 16 point strapping table to produce volumetric or gravimetric calculated readings if the dimensions of a vessel cannot be determined or the vessel is of an irregular shape.
- ▼ Flexible display of data in English or Metric units including feet, meters, pounds, kilograms, cubic feet, cubic meters, U.S./British bushels, gallons, liters, tons, metric tonnes.
- ▼ Unique back-lit display ensures visibility in low light conditions.
- ▼ Programmable 12-character alphanumeric name for labeling vessel contents.

#### PRINCIPLE OF OPERATION

The HMI² operator interface control console provides convenient, local interface for Monitor's "Smart" RS-485 SiloPatrol® SMU (Lable-based inventory monitoring sensors and/or Flexar® guided wave radar sensors. HMI² allows for monitoring up to 32 SMU (Land/or Flexar® sensors. The multi-functional HMI² displays measured and calculated data and displays system and sensor diagnostic messages communicated by two separate RS-485 communication networks.

The **HMI**<sup>2</sup> display screen can be easily switched to view calculated level, volume, weight or percent in addition to the basic distance measurement. The **HMI**<sup>2</sup> can be programmed to operate the SMU \$\mathbb{I}\$ "Smart" RS-485 sensors automatically, manually or allow for both. Menu options allow the user to select days of SMU \$\mathbb{I}\$ operation (such as Mon.-Fri.), time window (such as 7 a.m.-3 p.m.) and measurement interval (minimum 30 minutes). Flexar's measurements are updated automatically.

#### PRACTICAL APPLICATIONS

- ▼ Use when an affordable local interface with "Smart" RS-485 SMU's and/or Flexar® continuous level sensors is desired.
- Choose the HMI<sup>2</sup> as an operator interface when access to a PC is not available.
- Strapping table feature is ideal for when accuracies of geometrically calculated volumes and weights are not satisfactory.

#### OBTIONS

 Control analog outputs and/or relay outputs when using the optional Auxiliary Output Enclosure (AOE).

MONITOR


For more detailed information, please contact a Monitor representative or visit Monitor's website at http://www.monitortech.com/product\_c\_c\_hmi2.shtml



Scan this with a smartphone QR-Code app for more product details.





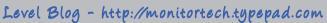

(

ERFACE HMI

Practical Tip

HMI<sup>2</sup> is a perfect operator interface

for environments too harsh for a

regular computer.



# Visit www.monitortech.com

### SPECIFICATIONS

Power Requirements: 100-240V AC, 50/60Hz

Power Consumption: 6VA max

Ambient Operating Temperature: -4° F to 131° F (-20° C to 55° C)

Sensor Communication: RS-485 half-duplex, non-isolated, proprietary protocol

Channels: Two 16-channel networks (32 channels total)

Display: 2 lines, 20 characters per line, 0.22" x 0.12" (5.59mm x 3.05mm) characters;

LCD backlight

Keypad: 20 keys


Indicators: 8 LEDs (function, relay, and error status)

Enclosure: Painted Aluminum

Overall Dimensions (HxWxD): 6.29" x 10.23" x 3.54" (160mm X 260mm X 90mm)


Approvals: CE Mark

#### ORDERING INFORMATION

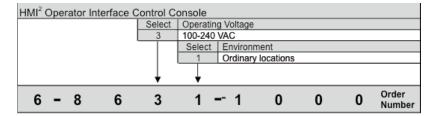

#### MECHANICALS

DIMENSIONS ARE SHOWN IN INCHES WITH MILLIMETER EQUIVALENT IN BRACKETS

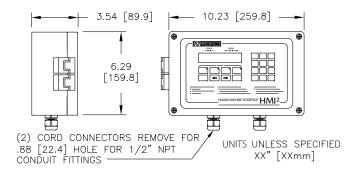

# 2-Year Limited Warranty

#### **ACCESSORIES:**

Part #	Description
6-4011	Wall Mounting Bracket (Set of 4)
R0514-22001	Belden® 9322 RS-485 communication
	cable (Overall Beldfoil® Shield - 100%
	Coverage, PVC Insulation, Chrome PVC
	Jacket, Nominal OD is .201" [5.10mm]) 1

#### NOTES:

 R0514-22001 cable is not for plenum installations. Consult local electrical codes and verify compliance before installing.

## MONITOR TECHNOLOGIES, LLC

44W320 Keslinger Road ▼ Elburn, IL 60119 USA Tel: 1-630-365-9403 ▼ In US/CAN 1-800-766-6486 Fax: 1-630-365-5646 ▼ monitor@monitortech.com

www.monitortech.com ▼ www.flexar.info Blog: www.monitortech.typepad.com

Information on this sheet is subject to change without notice.